


## General procedure for collecting water samples if testing for volatile organic chemicals (June 2005, Illinois Environmental Protection Agency)

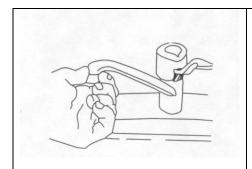


# 1: Remove the aerator from the indoor leak-free cold water faucet

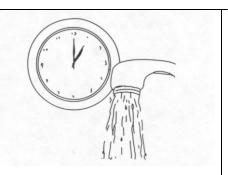

# 2: Let water run for 15 minutes to assure that you are getting water from the ground-water source (where your well is screened below ground).

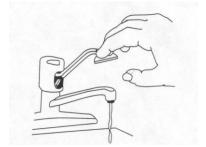


#3 Reduce the water flow until the stream is about ¼ inch in diameter.

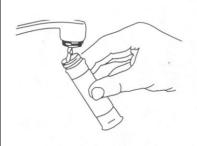


#4 Fill a prepared laboratory container as instructed by the lab. Hold the container at an angle to reduce aeration.



#5 Fill the container until there is a curved surface to the water on top.

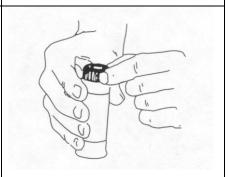

#6 Replace the cap. Avoid trapping air between the sample and the cap.

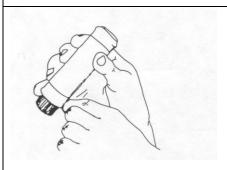

#7 Turn the vial upside down and tap. <u>If bubbles appear</u>, take another sample in a new container.

If **no bubbles** appear, transport the sample as instructed by the laboratory.

## Notes:

- Samples should be kept in a cooler with ice for transport to the lab.
- Do not keep samples longer than 24 hours before taking them to a lab
- If you use a water softener or filter, take the sample from an outside spigot not affected by those. Be

## sure to disconnect the hose before taking the sample.

- Containers have a special preservative for the volatile chemicals.
  Do not rinse or reuse lab containers or fill to overflowing.
- Always follow the lab directions.

Illustrations and text in this fact sheet were taken with permission from Home A Syst: An Environmental Risk-Assessment Guide for the Home developed by the National Farm\*A\*Syst/Home\*A\*Syst program in cooperation with NRAES, the Natural Resource, Agriculture, and Engineering Service, (607) 255-7654, <<a href="https://www.nraes.org">www.nraes.org</a>. Permission to use these materials was granted by NRAES based on an agreement with the University of Wisconsin, the copyright holder.